

## TWIN FILTER NOZZLES



Check that the assembly is complete in all its parts.

*Check holes in the plate!  
Hole diameter 30 mm*



*Check the soft saddle!  
Each pipe diameter has its saddle 48-60-75-90-110-160*



Screw the Nozzles keeping saddles adhering to the pipe



*Check the assembly!  
Nozzles will not have to move and saddles have to join perfectly with the pipe*



*Torque setting 5.0 Nm  
Screwing speed less than 200 rpm*



### SUGGESTED DEVICES

CHTW TORQUE SCREWDRIVER  
CHTC TORQUE SCREWDRIVER

