

INSTALLATION INSTRUCTION

Insert the Nozzle PTLT manually into the pipe hole, do not use hammer.

Check holes in the pipe
Make sure the hole diameter is 28-29mm - suitable for the TL expansion bolt dimension

1



Screw the Nozzle manually screw the nozzle holding the bolt

Check the saddle!
Each pipe diameter requires the correct saddle TA
Ø50-60-75-90-110-160

2



Screw clockwise the Nozzle
Torque set 5-10Nm
Max screw speed 400rpm

3

Check the assembly!
The Nozzle and the bolt should not move, the soft saddle must join perfectly to the pipe



**NOZZLE
INSTALLATION
ON PIPE**

**FILTER NOZZLE
PTLT**

**INSTALLAZIONE
UGELLO
SU TUBO**
**UGELLO
PTLT**

Inserisci l'Ugello PTLT
manualmente nel foro del tubo,
non usare il martello.

1

Controlla il foro del tubo!
Assicurati che il diametro del
foro sia 28-29mm - adatto per il
montaggio del tassello TL



Avvita l'Ugello
manualmente avvita l'ugello
tenendo fermo il tassello

2

Verifica la sella!
Ogni diametro di tubo richiede
la sella TA corretta
Ø50-60-75-90-110-160



Avvita in senso orario l'Ugello
Set dinamometro 5-10Nm
Max velocità 400rpm

3

Controlla l'assemblaggio!
L'ugello ed il tassello non
devono muoversi, la sella
morbida deve aderire al tubo

