

FILTER NOZZLE + SLEEVE MP



Insert the MP sleeve into the hole from the top side of the plate and block it



Check holes in the plate!
Hole for sleeve MP
range 31,5 - 32,0 mm - 15/16"W
range 37,0 - 37,5 mm - 1 1/4"W



Introduce the Nozzle's stem into MP sleeve and screw it




Check plate thickness!
Each thickness of the plate
requires the right sleeve MP

SUGGESTED

SOAPY WATER TO MAKE THE SCREWING EASIER



Torque setting 5.0 Nm
Screwing speed less than
200 rpm

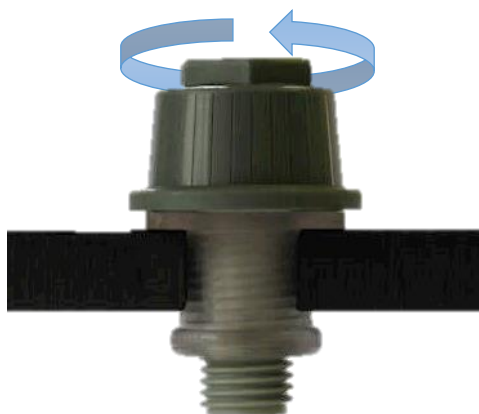

Check the assembly!
The sleeve will not have to
move and have to join
perfectly with the plate

SUGGESTED DEVICES

CHTW TORQUE SCREWDRIVER
CHTC TORQUE SCREWDRIVER

