


## FILTER NOZZLE ON THREADED PLATE

1


Screw the Nozzle into the threaded hole from the top side of the plate

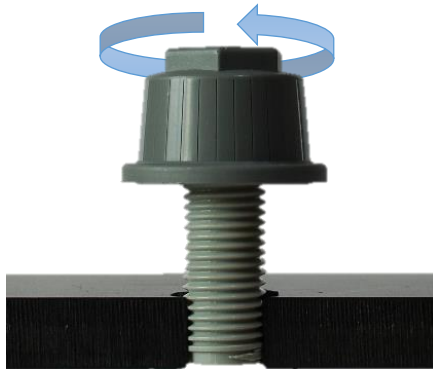

*Check thread in the plate!  
The nozzle's thread must match with the thread in the plate*

2

Screw the Nozzle by hand. You should not have any trouble

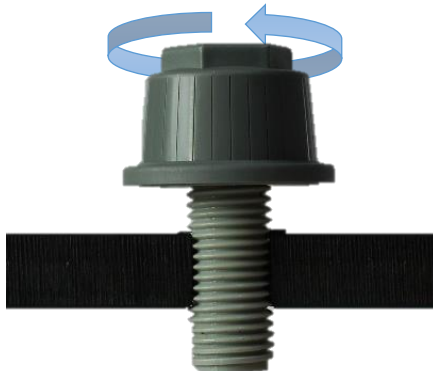

*Check nozzle's thread!  
if you turn it with difficulty the thread of the nozzle could be damaged*

SUGGESTED DEVICES  
CHDX LOCKING WRENCH

3

Torque setting 5.0 Nm  
Screwing speed less than 400 rpm



*Check the assembly!  
The nozzle will not have to move and have to join perfectly with the plate*

SUGGESTED DEVICES  
CHTW TORQUE SCREWDRIVER  
CHTC TORQUE SCREWDRIVER

